


VERSO CF 5000 V


CF section dissassembly instructions

1


- 1 Remove the doors and front panel
- 2 Disconnect cables from by-pass damper actuator (1 connector if standard by-pass, or 4 connectors if multi damper is installed)
- 3 Pull the lever to release CF heat exchanger
- 4 Remove CF heat exchanger together with by-pass or multi damper
- 5 Unscrew bolts (8 pcs. Per profile) and remove front and back profiles of the base frame
- 6 Remove air filters (4 pcs.)
- 7 Disconnect power and communication cables in the upper side of the section
- 8 Release external fixing connectors on top of the section
- 9 Unscrew 5 bolts in the upper side, holding two sides of the section
- 10 Unscrew 5 bolts in the bottom, holding two sides of the section
- 11 Separate both section parts

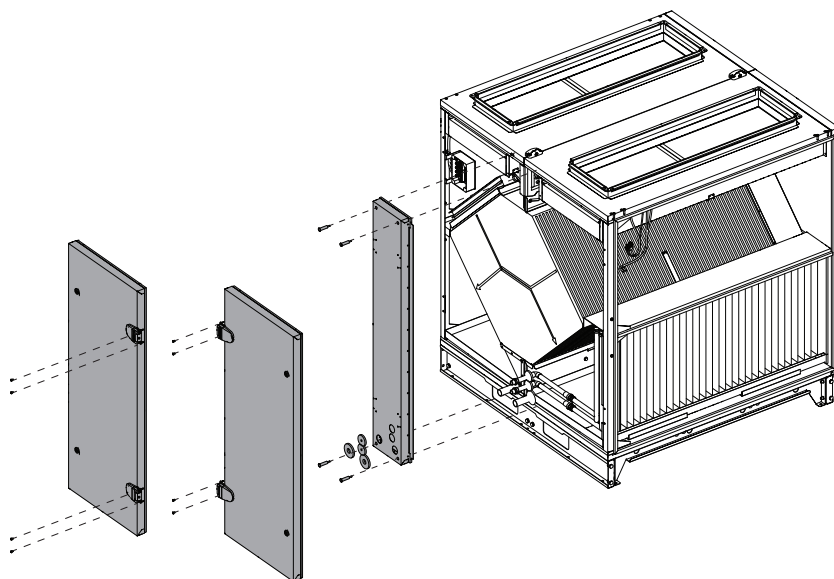


2

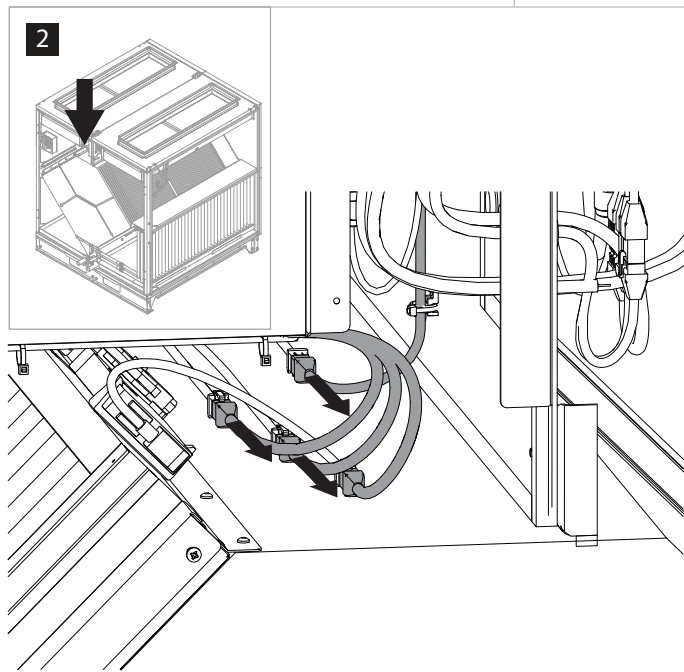


3

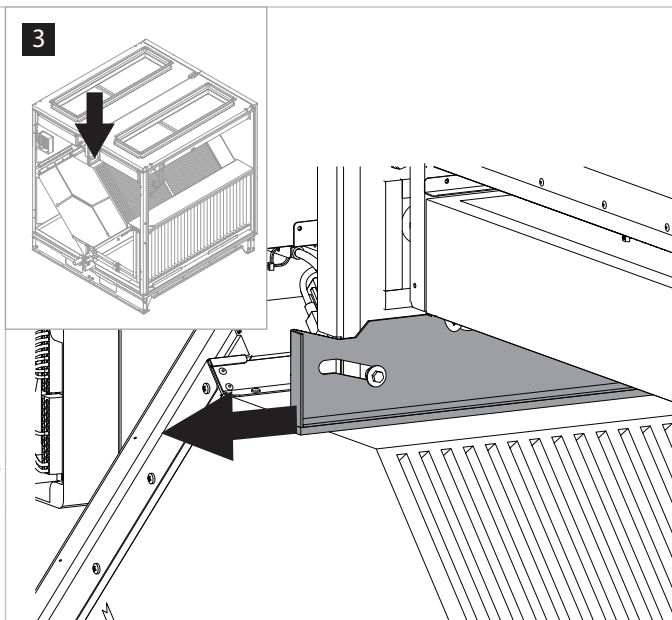


4

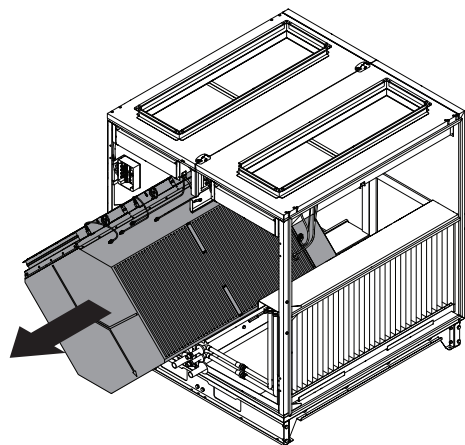



5

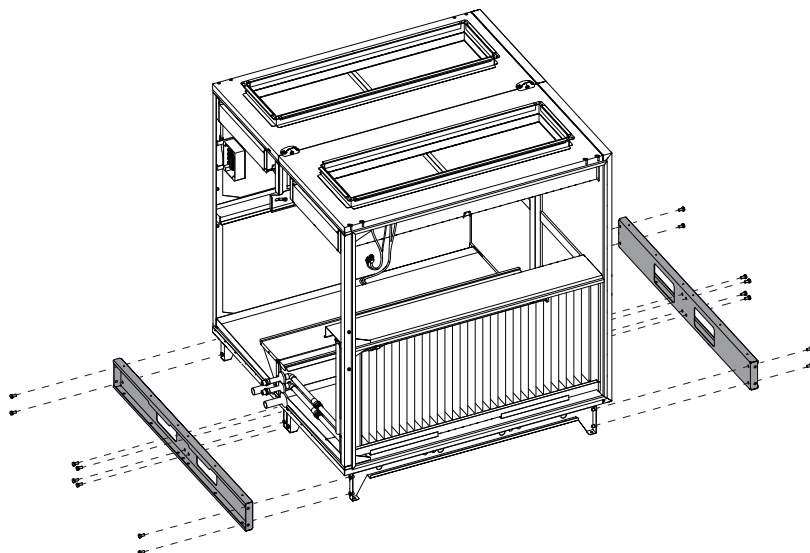


6

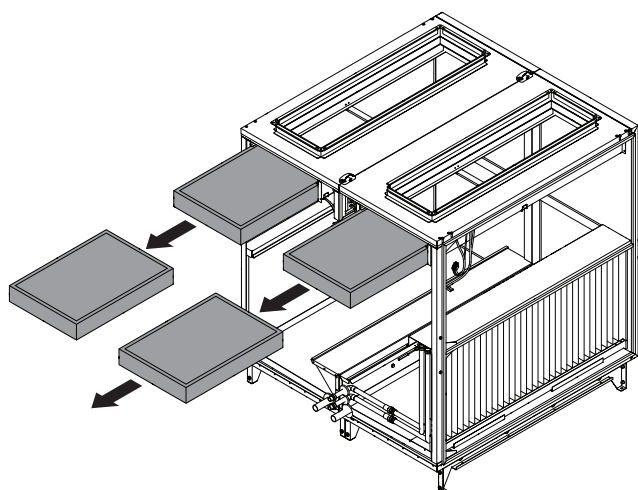




7

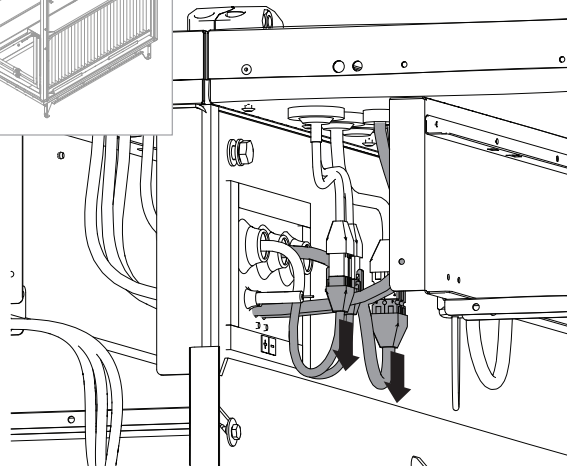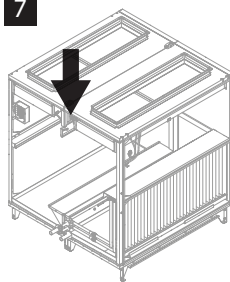



8

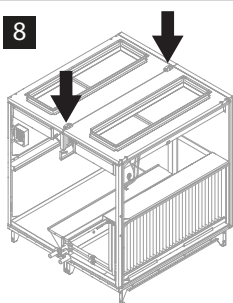

9

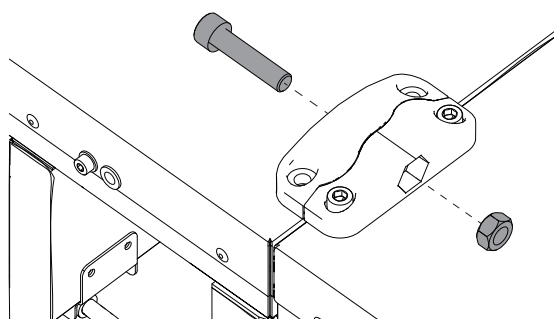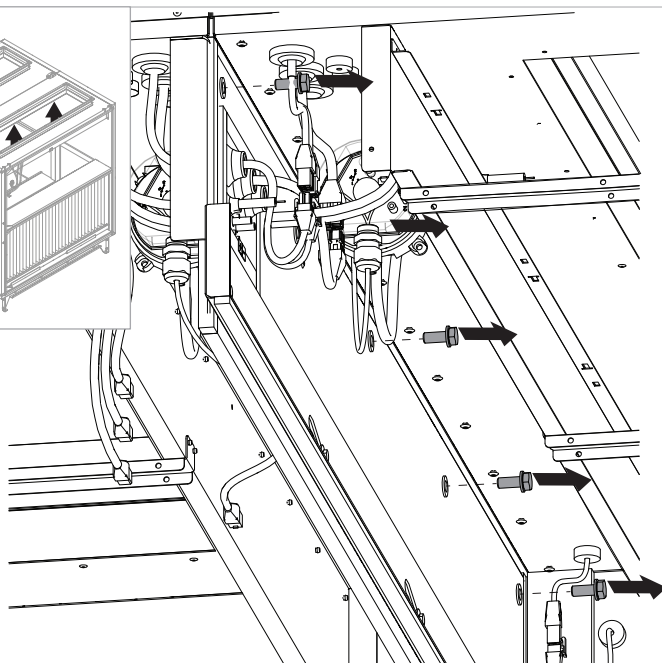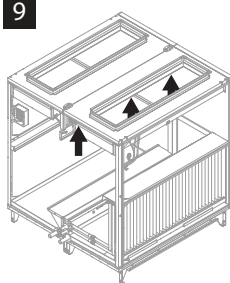

10

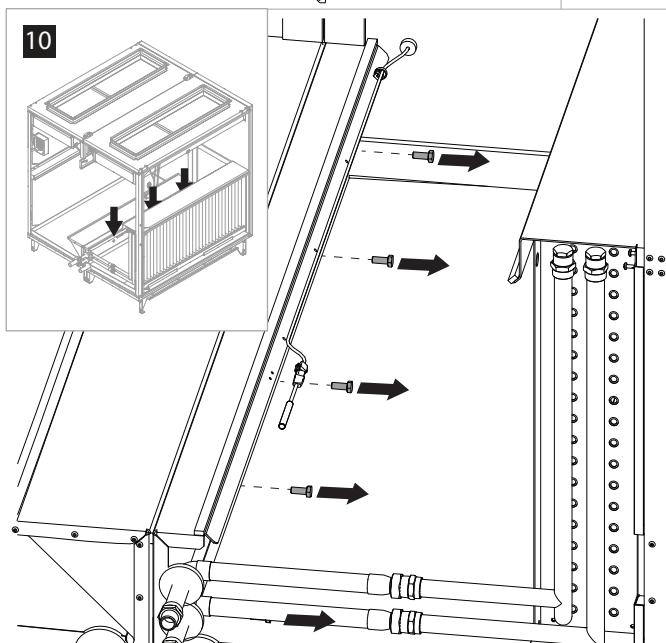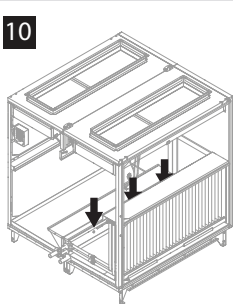

11

