


VERSO CF 7000 V


CF section dissassembly instructions

- 1** Remove the doors and front panel
- 2** Disconnect cables from by-pass damper actuator (1 connector if standard by-pass, or 4 connectors if multi damper is installed)
- 3** Pull the lever to release CF heat exchanger
- 4** Remove CF heat exchanger together with by-pass or multi damper
- 5** Unscrew bolts (2 pcs.) at the front and back of the base frame
- 6** Remove air filters (4 pcs.)
- 7** Disconnect power and communication cables in the upper side of the section
- 8** Unscrew 4 bolts in the upper side, holding two sides of the section
- 9** Unscrew 5 bolts in the bottom, holding two sides of the section
- 10** Separate both section parts


1

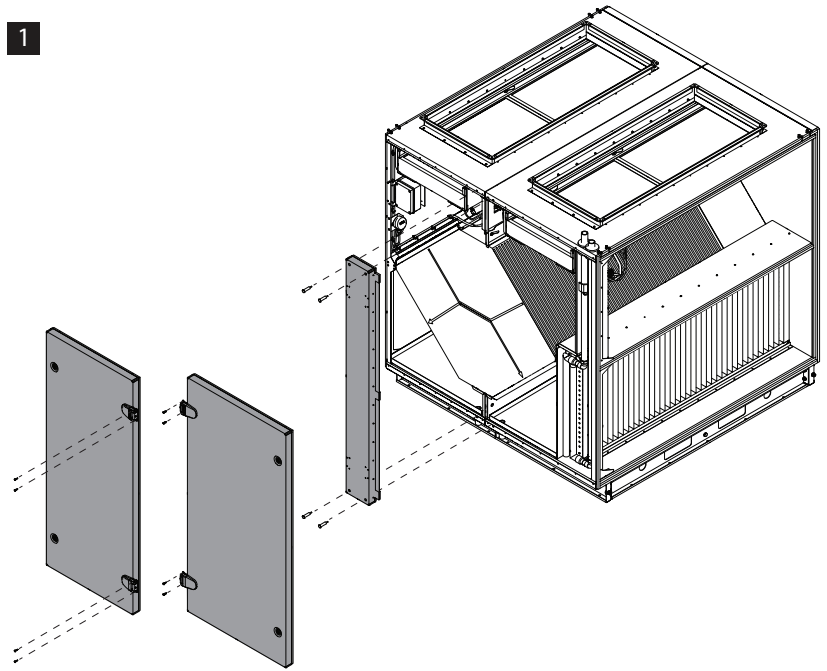


2

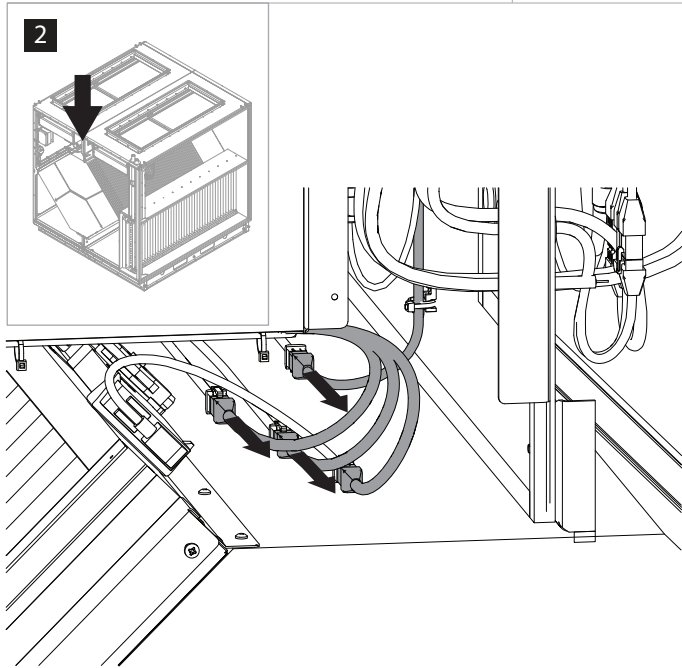


3

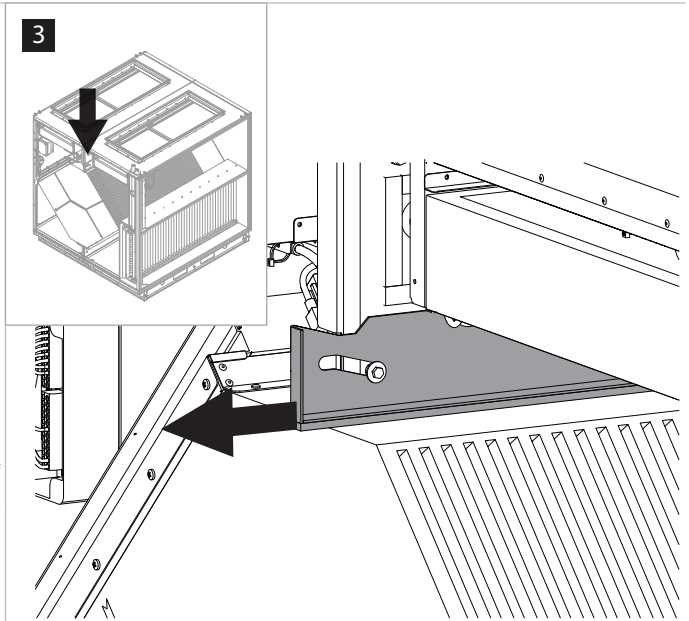


4

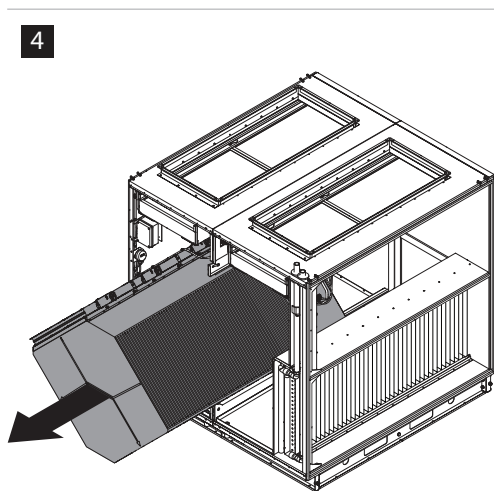



5

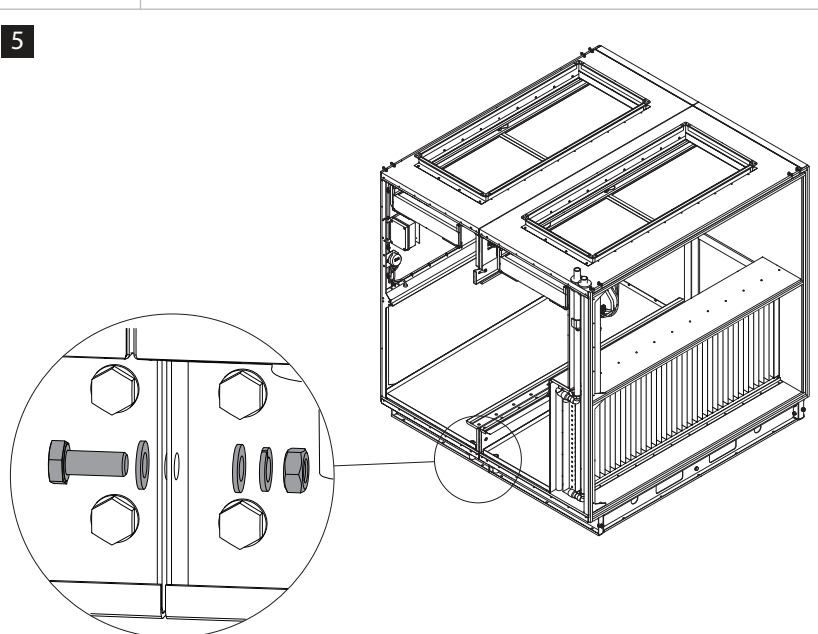



6

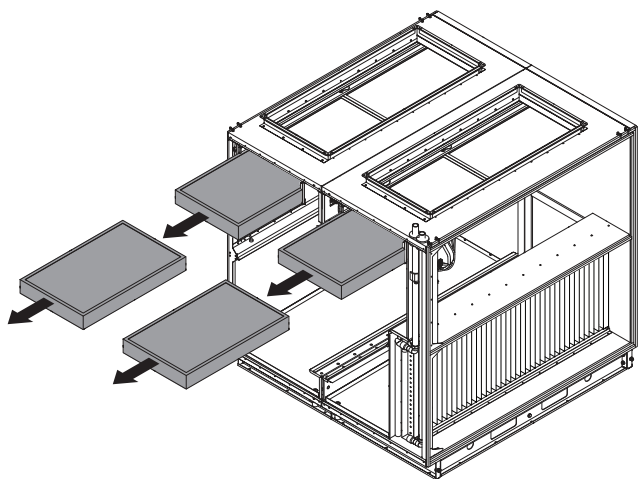



7

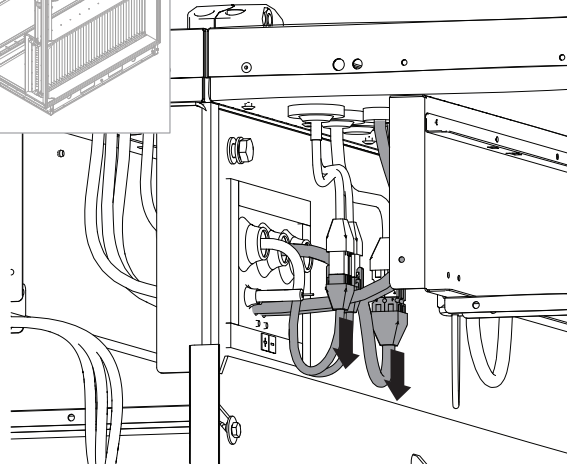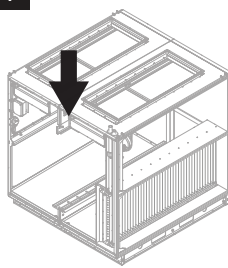

8

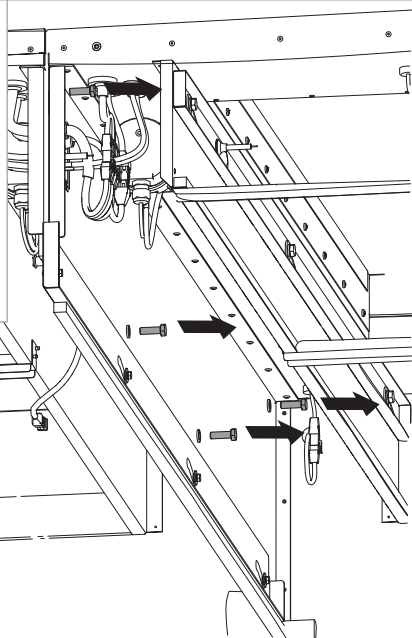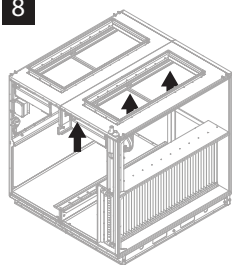

9

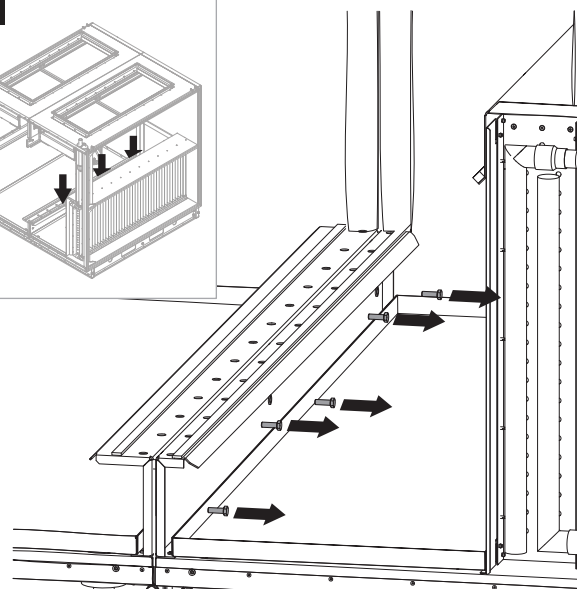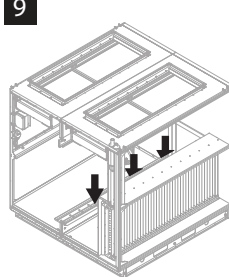

10

