


CJ-PLOK

Central connector

Central connector is used to connect the main supply/exhaust air pipe to the distribution box PLOK 75×10. The unused part which diameter is smaller than that of the pipe should be cut off. Constructed from high quality polypropylene.

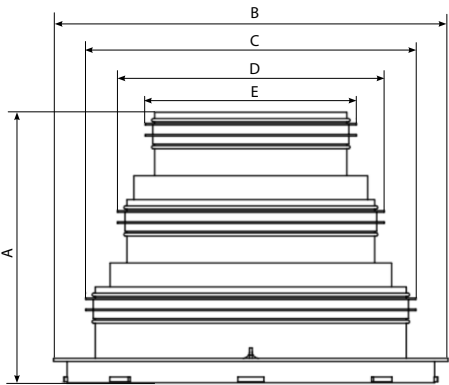

Model	Dimensions, mm					Code
	A	B	C	D	E	
CJ-PLOK 125/160/200	170,4	249	200	160	125	1156986