


SJ-PLOK

Side connector

Side connector is used to connect the main supply/exhaust air pipe to either side of the distribution box . It is designed to be fixed into the oval slot on either side of the distribution box replacing one 3x75 module. If a 125 mm diameter pipe is used, the unused part should be cut off.

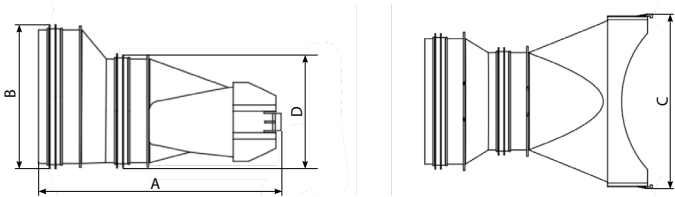

Model	Dimensions, mm				Code
	A	B	C	D	
SJ-PLOK 125/160	284	160	216	125	1156987