

komfovent[®]



MOU



INSTALLATION
MANUAL

EN

CONTENT

1. SAFETY PRECAUTIONS	3
2. OUTDOOR UNIT INSTALLATION	4
2.1. Outdoor Unit Installation Instructions	4
3. REFRIGERANT PIPING CONNECTION	9
3.1. Notes On Pipe Length and Elevation	9
3.2. Refrigerant Piping Connection Instructions	9
4. PIPING DIAGRAMS	12
5. WIRING	14
5.1. Outdoor Unit Wiring	15
6. AIR EVACUATION	16
6.1. Evacuation Instructions	16
6.2. Note On Adding Refrigerant	17
7. OUTDOOR UNIT SPECIFICATIONS	18
8. AHU KIT SPECIFICATIONS	20
8.1. Introduction	20
8.2. Specification and packing list	20
8.3. System design	21
8.4. Function and Setting	22
8.4.1. KA8140/KA8141	22
8.4.2. KA8243/KA8245	22
8.4.3. AHUKZ-02D	25
8.5. Control module connection to controller	26
8.5.1. KA8140/KA8141 connection to C6	26
8.5.2. KA8140/KA8141 connection to C6M	26
8.5.3. KA8140/KA8141 connection to C5	26
8.5.4. KA8140/KA8141 connection to C5 zone	27
8.5.5. KA8243/KA8245 connection to C5	27
8.5.6. KA8243/KA8245 connection to C5 zone	27
8.5.7. AHUKZ-02D connection to C5 controller	28
8.5.8. AHUKZ-02D connection to C5 additional zone	28
8.6. Malfunction, Error Code and Solving steps	29
8.6.1. E1 solving step – communication error with outdoor unit	30
8.6.2. E2 – temp sensor malfunction	31
8.6.3. Ed – outdoor unit malfunction	31
8.7. Dimensions	32
8.7.1. KA8140/KA8141	32
8.7.2. KA8243/KA8245	32
8.7.3. AHUKZ-02D	33



This symbol indicates that this product is not to be disposed of with your household waste, according to the WEEE Directive (2002/96/EC) and your national law. This product should be handed over to a designated collection point, or to an authorised collection site for recycling waste electrical and electronic equipment (EEE). Improper handling of this type of waste could have a possible negative impact on the environment and human health due to potentially hazardous substances that are generally associated with EEE. At the same time, your cooperation in the correct disposal of this product will contribute to the effective usage of natural resources. For more information about where you can drop off your waste equipment for recycling, please contact your local city office, waste authority, approved WEEE scheme or your household waste disposal service.

1. SAFETY PRECAUTIONS

Read Safety Precautions Before Installation

Incorrect installation due to ignoring instructions can cause serious damage or injury. The seriousness of potential damage or injuries is classified as either a WARNING.



Failure to observe a warning may result in death. The appliance must be installed in accordance with national regulations. Failure to observe a caution may result in injury or equipment damage.



- Carefully read the Safety Precautions before installation.
- Only trained and certified technicians should install, repair and service this air conditioning unit. Improper installation may result in electrical shock, short circuit, leaks, fire or other damage to the equipment and personal property.
- Strictly follow the installation instructions set forth in this manual. Improper installation may result in electrical shock, short circuit, leaks, fire or other damage to the equipment.
- Before you install the unit, consider strong winds, typhoons and earthquakes that might affect your unit and locate it accordingly. Failure to do so could cause the equipment to fail.
- After installation, ensure there are no refrigerant leaks and that the unit is operating properly. Refrigerant is both toxic and flammable and poses a serious health and safety risk.

Note about Fluorinated Gasses

1. This unit contains fluorinated gasses. For specific information on the type of gas and the amount, please refer to the relevant label on the unit itself.
2. Installation, service, maintenance and repair of this unit must be performed by a certified technician.
3. Product uninstallation and recycling must be performed by a certified technician.
4. If the system has a leak-detection system installed, it must be checked for leaks at least every 12 months.
5. When the unit is checked for leaks, proper record-keeping of all checks is strongly recommended.

2. OUTDOOR UNIT INSTALLATION

2.1. Outdoor Unit Installation Instructions

Step 1: Select installation location.

The outdoor unit should be installed in the location that meets the following requirements:

- Place the outdoor unit as close to the indoor unit as possible.
- Ensure that there is enough room for installation and maintenance.
- The air inlet and outlet must not be obstructed or exposed to strong wind.
- Ensure the location of the unit will not be subject to snowdrifts, accumulation of leaves or other seasonal debris. If possible, provide an awning for the unit. Ensure the awning does not obstruct airflow.
- The installation area must be dry and well ventilated.
- There must be enough room to install the connecting pipes and cables and to access them for maintenance.
- The area must be free of combustible gases and chemicals.
- The pipe length between the outdoor and indoor unit may not exceed the maximum allowable pipe length.
- If possible, DO NOT install the unit where it is exposed to direct sunlight.
- If possible, make sure the unit is located far away from your neighbors' property so that the noise from the unit will not disturb them.
- If the location is exposed to strong winds (for example: near a seaside), the unit must be placed against the wall to shelter it from the wind. If necessary, use an awning. (See Fig. 2.1 & 2.2)
- Install the indoor and outdoor units, cables and wires at least 1 meter from televisions or radios to prevent static or image distortion. Depending on the radio waves, a 1 meter distance may not be enough to eliminate all interference.

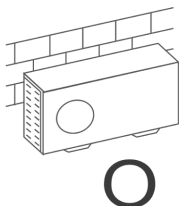


Fig. 2.1

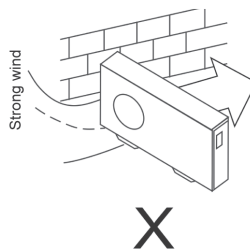


Fig. 2.2

Step 2: Install outdoor unit.

Fix the outdoor unit with anchor bolts (M10)

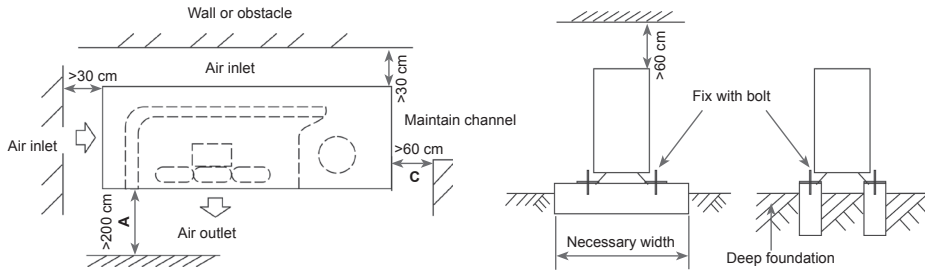


Fig. 2.3



- Be sure to remove any obstacles that may block air circulation.
- Make sure you refer to Length Specifications to ensure there is enough room for installation and maintenance.

Split Type Outdoor Unit (Refer to Fig 3.4, 3.5, 3.6, 3.7)

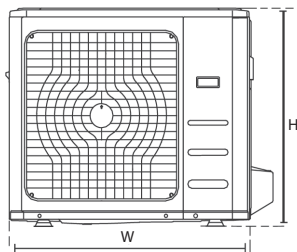


Fig. 2.4

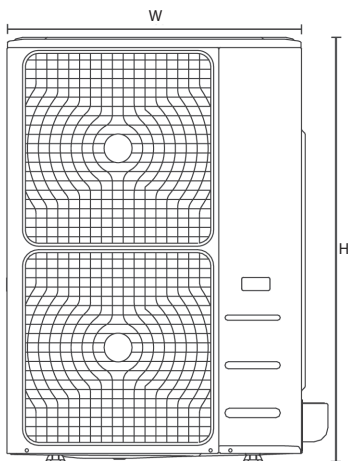


Fig. 2.5

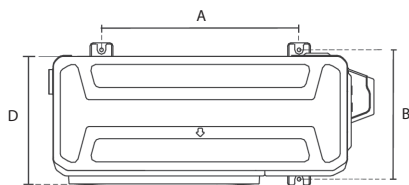


Fig. 2.6

Model	Outdoor unit dimensions W × D × H	Mounting Dimensions, mm	
		A	B
MOU-12HFN8a	720 × 270 × 495	452	269
MOU-18HFN8a	805 × 330 × 554	511	317
MOU-24HFN8	845 × 363 × 702	540	350
MOU-24HFN8a	890 × 342 × 673	663	348
MOU-36HFN8	946 × 410 × 810	673	403
MOU-36HFN8a	946 × 410 × 810	673	403
MOU-48HFN8	952 × 410 × 1333	634	403
MOU-48HFN8a	952 × 415 × 1333	634	404
MOU-55HFN8	952 × 410 × 1333	634	404
MOU-55HFN8a	952 × 415 × 1333	634	404
MOU-280-HFN6	1120 × 442 × 1555	668	494
MOU-335-HFN6	1120 × 442 × 1555	668	494

NOTE: The minimum distance between the outdoor unit and walls described in the installation guide does not apply to air-tight rooms. Be sure to keep the unit unobstructed in at least two of the three directions (M, N, P) (See Fig. 2.7).

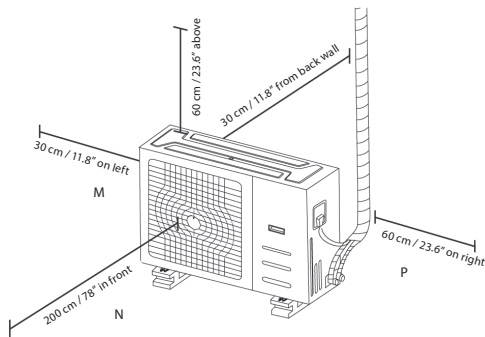


Fig. 2.7

Drain Joint Installation

Before bolting the outdoor unit in place, you must install the drain joint at the bottom of the unit (See Fig. 2.8).

1. Fit the rubber seal on the end of the drain joint that will connect to the outdoor unit.
2. Insert the drain joint into the hole in the base pan of the unit.
3. Rotate the drain joint 90° until it clicks in place facing the front of the unit.
4. Connect a drain hose extension (not included) to the drain joint to redirect water from the unit during heating mode.

NOTE: Make sure the water drains to a safe location where it will not cause water damage or a slipping hazard.

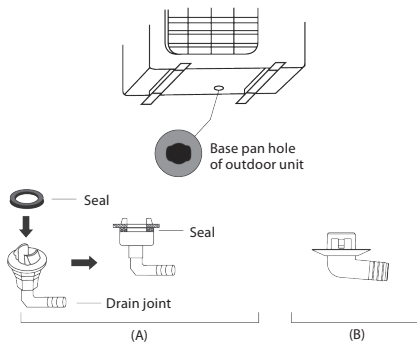


Fig. 2.8

3. REFRIGERANT PIPING CONNECTION

Safety Precautions



- All field piping must be completed by a licensed technician and must comply with the local and national regulations.
- When the air conditioner is installed in a small room, measures must be taken to prevent the refrigerant concentration in the room from exceeding the safety limit in the event of refrigerant leakage. If the refrigerant leaks and its concentration exceeds its proper limit, hazards due to lack of oxygen may result.
- When installing the refrigeration system, ensure that air, dust, moisture or foreign substances do not enter the refrigerant circuit. Contamination in the system may cause poor operating capacity, high pressure in the refrigeration cycle, explosion or injury.
- Ventilate the area immediately if there is refrigerant leakage during the installation. Leaked refrigerant gas is both toxic and flammable. Ensure there is no refrigerant leakage after completing the installation work.

3.1. Notes On Pipe Length and Elevation

Ensure that the length of the refrigerant pipe, the number of bends, and the drop height between the indoor and outdoor units meets the requirements.

3.2. Refrigerant Piping Connection Instructions



- **DO NOT** install the connecting pipe until both indoor and outdoor units have been installed.
- Insulate both the gas and liquid piping to prevent water leakage.

Step1: Cut pipes

When preparing refrigerant pipes, take extra care to cut and flare them properly. This will ensure efficient operation and minimize the need for future maintenance.

1. Measure the distance between the indoor and outdoor units.
2. Using a pipe cutter, cut the pipe a little longer than the measured distance.



DO NOT deform pipe while cutting. Be extra careful not to damage, dent, or deform the pipe while cutting. This will drastically reduce the heating efficiency of the unit.

Make sure that the pipe is cut at a perfect 90° angle. Refer to Fig. 3.1 for examples of bad cuts.

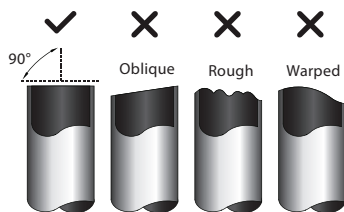


Fig. 3.1

Step 2: Remove burrs.

Burrs can affect the air-tight seal of refrigerant piping connection. They must be completely removed.

1. Hold the pipe at a downward angle to prevent burrs from falling into the pipe.
2. Using a reamer or deburring tool, remove all burrs from the cut section of the pipe.

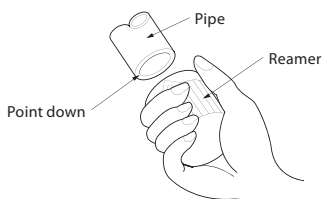


Fig. 3.2

Step 3: Flare pipe ends

Proper flaring is essential to achieve an airtight seal.

1. After removing burrs from cut pipe, seal the ends with PVC tape to prevent foreign materials from entering the pipe.
2. Sheath the pipe with insulating material.
3. Place flare nuts on both ends of pipe. Make sure they are facing in the right direction, because you can't put them on or change their direction after flaring. See Fig. 3.3.

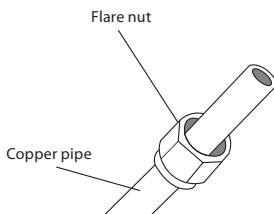


Fig. 3.3

4. Remove PVC tape from ends of pipe when ready to perform flaring work.
5. Clamp flare form on the end of the pipe. The end of the pipe must extend beyond the flare form.

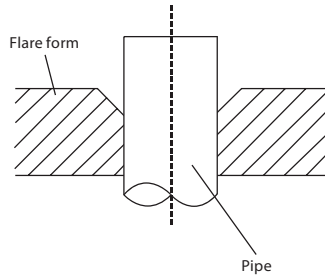


Fig. 3.4

6. Place flaring tool onto the form.
7. Turn the handle of the flaring tool clockwise until the pipe is fully flared. Flare the pipe in accordance with the dimensions shown in table 3.1.

Table 3.1. PIPING EXTENSION BEYOND FLARE FORM

Pipe gauge	Tightening torque	Flare dimension (A) (Unit: mm/Inch)		Flare shape
		Min.	Max.	
Ø 6.4	14.2-17.2 N.m (144-176 kgf.cm)	8.3	8.7	
Ø 9.5	32.7-39.9 N.m (333-407 kgf.cm)	12.0	12.4	
Ø 12.7	49.5-60.3 N.m (504-616 kgf.cm)	15.4	15.8	
Ø 15.9	61.8-75.4 N.m (630-770 kgf.cm)	18.6	19.1	
Ø 19.1	97.2-118.6 N.m (990-1210 kgf.cm)	22.9	23.3	
Ø 22	109.5-133.7 N.m (1117-1364 kgf.cm)	27	27.3	

Fig. 3.5


8. Remove the flaring tool and flare form, then inspect the end of the pipe for cracks and even flaring.




Check to make sure there is no refrigerant leak after completing the installation work. If there is a refrigerant leak, ventilate the area immediately and evacuate the system (refer to the Air Evacuation section of this manual).

4. PIPING DIAGRAMS


MOU-12HFN8a, MOU-18HFN8a, MOU-24HFN8, MOU-24HFN8a

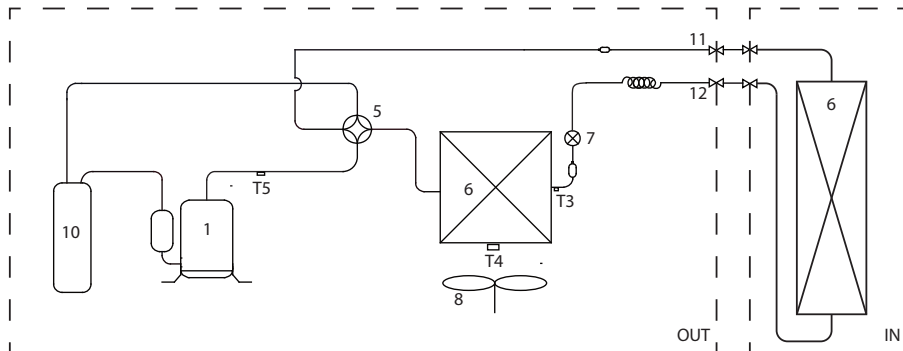


MOU-36HFN8, MOU-36HFN8a, MOU-48HFN8, MOU-48HFN8a, MOU-55HFN8, MOU-55HFN8a

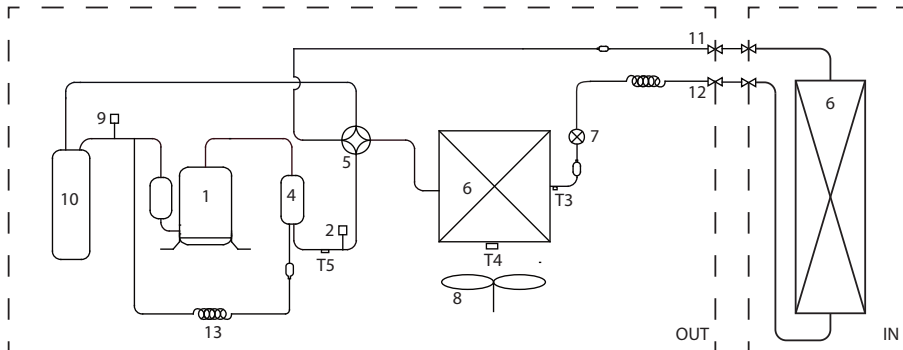

MOU-280-HFN6

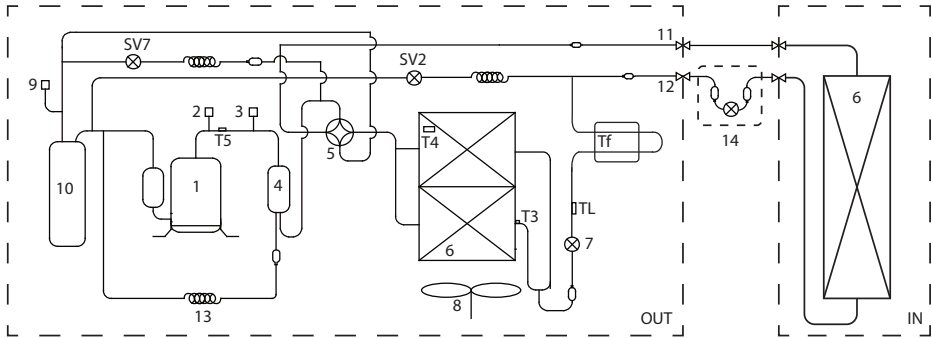

MOU-335-HFN6

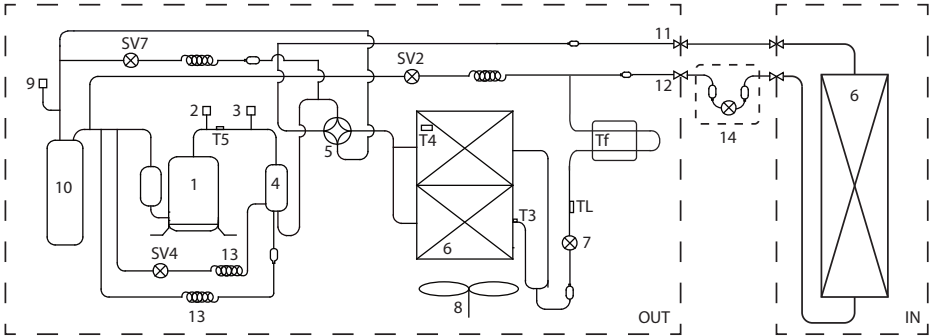

1	Compressor	13	Oil return capillary
2	High pressure switch	14	AHU kit AHUKZ-02D
3	High pressure sensor	OUT	Outdoor unit
4	Oil separator	IN	Indoor device
5	Four-way valve	T3	Heat exchanger temperature sensor
6	Heat exchanger	T4	Outdoor ambient temperature sensor
7	Electronic expansion valve (EXV)	T5	Discharge temperature sensor
8	Fan	Tf	Heat sink temperature sensor
9	Low pressure switch	TL	Refrigerant cooling pipe temperature sensor
10	Accumulator	SV2	Liquid injection valve
11	Stop valve (gas side)	SV4	Oil return valve
12	Stop valve (liquid side)	SV7	Refrigerant bypass valve

5. WIRING

Safety Precautions



- Be sure to disconnect the power supply before working on the unit.
- All electrical wiring must be done according to local and national regulations.
- Electrical wiring must be done by a qualified technician. Improper connections may cause electrical malfunction, injury and fire.
- An independent circuit and single outlet must be used for this unit. DO NOT plug another appliance or charger into the same outlet. If the electrical circuit capacity is not enough or there is a defect in the electrical work, it can lead to shock, fire, unit and property damage.
- Connect the power cable to the terminals and fasten it with a clamp. An insecure connection may cause fire.
- Make sure that all wiring is done correctly and the control board cover is properly installed. Failure to do so can cause overheating at the connection points, fire, and electrical shock.
- Ensure that main supply connection is made through a switch that disconnects all poles, with contact gap of a least 3 mm (0.118").
- **DO NOT** modify the length of the power cord or use an extension cord.

- Connect the outdoor wires before connecting the indoor wires.
- Make sure you ground the unit. The grounding wire should be away from gas pipes, water pipes, lightning rods, telephone or other grounding wires. Improper grounding may cause electrical shock.



DO NOT connect the unit with the power source until all wiring and piping is completed.

- Make sure that you do not cross your electrical wiring with your signal wiring, as this can cause distortion and interference.
Follow these instructions to prevent distortion when the compressor starts:
- The unit must be connected to the main outlet. Normally, the power supply must have a low output impedance of 32 ohms.
- No other equipment should be connected to the same power circuit.
- The unit's power information can be found on the rating sticker on the product.

5.1. Outdoor Unit Wiring



Before performing any electrical or wiring work, turn off the main power to the system.

1. Prepare the cable for connection
 - a. You must first choose the right cable size before preparing it for connection. Be sure to use H07RN-F cables.

Table 5.1. Minimum Cross-Sectional Area of Power and Signal Cables North America

Rated Current of Appliance (A)	AWG
≤ 7	18
7 - 13	16
13 - 18	14
18 - 25	12
25 - 30	10

Table 5.2: Other Regions

Rated Current of Appliance (A)	AWG
≤ 6	0.75
6 - 10	1
10 - 16	1.5
16 - 25	2.5
25 - 32	4
32 - 45	6

- b. Using wire strippers, strip the rubber jacket from both ends of signal cable to reveal about 15 cm (5.9") of the wires inside.
 - c. Strip the insulation from the ends of the wires.
 - d. Using a wire crimper, crimp u-lugs on the ends of the wires.

NOTE: While connecting the wires, please strictly follow the wiring diagram (found inside the electrical box cover).

2. Remove the electric cover of the outdoor unit. If there is no cover on the outdoor unit, disassemble the bolts from the maintenance board and remove the protection board. (See Fig. 5.1)

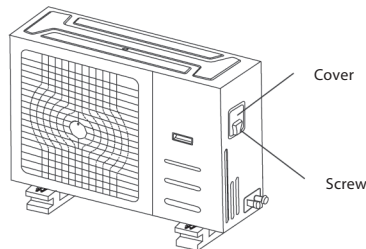


Fig. 5.1

3. Connect the u-lugs to the terminals Match the wire colors/labels with the labels on the terminal block, and firmly screw the u-lug of each wire to its corresponding terminal.
 4. Clamp down the cable with designated cable clamp.
 5. Insulate unused wires with electrical tape. Keep them away from any electrical or metal parts.
 6. Reinstall the cover of the electric control box.

6. AIR EVACUATION

Safety Precautions

- Use a vacuum pump with a gauge reading lower than -0.1MPa and an air discharge capacity above 40L/min .
- The outdoor unit does not need vacuuming. DO NOT open the outdoor unit's gas and liquid stop valves.
- Ensure that the Compound Meter reads -0.1MPa or below after 2 hours. If after three hours of operation and the gauge reading is still above -0.1MPa , check if there is a gas leak or water inside the pipe. If there is no leakage, perform another evacuation for 1 or 2 hours.
- DO NOT use refrigerant gas to evacuate the system.

6.1. Evacuation Instructions

Before using manifold gauge and vacuum pump, read their operation manuals to familiarize yourself with how to use them properly.

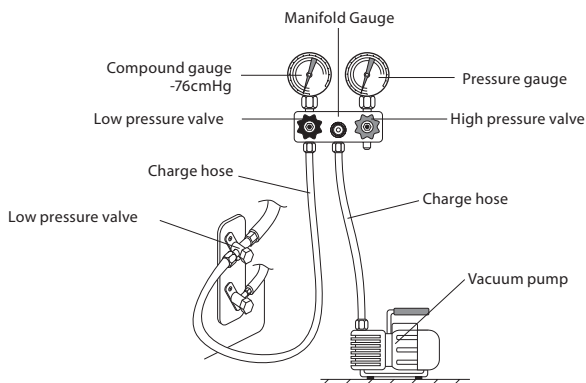


Fig. 6.1

1. Connect the charge hose of the manifold gauge to service port on the outdoor unit's low pressure valve.
2. Connect another charge hose from the manifold gauge to the vacuum pump.
3. Open the Low Pressure side of the manifold gauge. Keep the High Pressure side closed.
4. Turn on the vacuum pump to evacuate the system.
5. Run the vacuum for at least 15 minutes, or until the Compound Meter reads -76cmHG ($-1 \times 10^5\text{Pa}$).
6. Close the Low Pressure side of the manifold gauge, and turn off the vacuum pump.
7. Wait for 5 minutes, then check that there has been no change in system pressure.

NOTE: If there is no change in system pressure, unscrew the cap from the packed valve (high pressure valve). If there is a change in system pressure, there may be a gas leak.

8. Insert hexagonal wrench into the packed valve (high pressure valve) and open the valve by turning the wrench in a $1/4$ counterclockwise turn. Listen for gas to exit the system, then close the valve after 5 seconds.

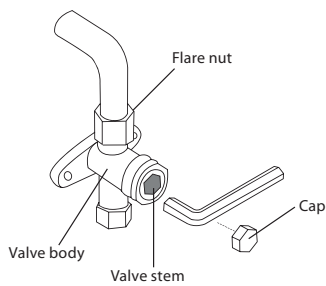


Fig. 6.2

- 9. Watch the Pressure Gauge for one minute to make sure that there is no change in pressure. The Pressure Gauge should read slightly higher than atmospheric pressure.
- 10. Remove the charge hose from the service port.
- 11. Using hexagonal wrench, fully open both the high pressure and low pressure valves.

OPEN VALVE STEMS GENTLY

When opening valve stems, turn the hexagonal wrench until it hits against the stopper.

DO NOT try to force the valve to open further.

- 12. Tighten valve caps by hand, then tighten it using the proper tool.

6.2. Note On Adding Refrigerant

- Refrigerant charging must be performed after wiring, vacuuming and the leak test.
- DO NOT exceed the maximum allowable quantity of refrigerant or overcharge the system. Doing so can damage or impact the unit's function.
- Charging with unsuitable substances may cause explosions or accidents. Ensure that the appropriate refrigerant is used.
- Refrigerant containers must be opened slowly. Always use protective gear when charging the system.
- DO NOT mix refrigerants types.

Some systems require additional charging depending on pipe lengths L (m).

Pipe diameter, mm	Ø 6,35	Ø 9,52	Ø 12,7	Ø 15,9
Additional refrigerant volume, g	15x(L-5)	30x(L-5)	110x(L-7,5)	170x(L-7,5)

The standard pipe length varies according to local regulations.

7. OUTDOOR UNIT SPECIFICATIONS

Model	MOU-12HFN8a	MOU-18HFN8a	MOU-24HFN8	MOU-24HFN8a	MOU-36HFN8	MOU-36HFN8a
Cooling capacity, kW	3.50 (1.1~4.2)	5.30 (3.4~5.83)	7.03 (3.22~8.21)	7.03 (3.28~8.16)	10.55 (4.04~12.02)	10.55 (2.73~11.78)
EER	2.89	3.42	3.21	2.54	2.67	2.79
SEER	6.1	7.0	6.1	6.2	6.1	6.1
Energy Efficiency Class	A++	A++	A++	A++	A++	A++
Heating capacity, kW	3.80 (1.1~4.2)	5.6 (3.1~5.85)	7.62 (2.43~8.65)	7.62 (2.81~8.49)	11.14 (2.95~14.14)	11.72 (2.78~12.84)
COP	3.45	3.57	3.72	3.01	3.71	3.27
SCOP	4.0	4.0	4.0	4.0	4.0	4.0
Energy Efficiency Class	A++	A+	A+	A+	A+	A+
Max. input consumption, W	2150	2500	2950	3700	5600	5000
Max. input current, A	10	13	13.5	19.0	10.0	10
Power supply, Ph, V, Hz	1Ph, 220-240V, 50Hz	1Ph, 220-240V, 50Hz	1Ph, 220-240V, 50Hz	1Ph, 220-240V, 50Hz	3Ph, 380-415V, 50Hz	3Ph, 380-415V, 50Hz
Wiring, # x mm ²	3 x 1,0	3 x 1,5	3 x 2,5	3 x 2,5	5 x 2,5	5 x 2,5
Compressor type	Rotary	Rotary	Rotary	Rotary	Rotary	Rotary
Compressor model			ZKFN-50-8-2	KTM240D43UKT	ZKFN-120-8-2	KTF310D43UMT
Compressor capacity, W	3255	4385	7649	7600	10010	10010
Refrigerant oil/oil charge, ml	ESTER OIL VG74/310	VG74/440	ESTEL OIL RB74AF/670	VG74/620	VG74/1000	VG74/1000
Outdoor air flow, m ³ /h	1800	2100	2700	3500	4000	4000
Outdoor noise level (sound pressure), dB(A)	56	57	62	60	64	63
Outdoor dimension (WxDxH), mm	720 x 270 x 495	874 x 330 x 554	845 x 363 x 702	890 x 342 x 673	946 x 410 x 810	946 x 410 x 810
Outdoor packing (WxDxH), mm	835 x 300 x 540	915 x 370 x 615	965 x 395 x 775	995 x 398 x 740	1090 x 500 x 885	1090 x 500 x 885
Outdoor Net / Gross weight, kg	23.2/25.0	33.5/36.1	49.4/52.8	43.9/46.9	81.5/87.0	80.5/85
Refrigerant type	R32	R32	R32	R32	R32	R32
GWP	675	675	675	675	675	675
Refrigerant charged volume, kg	0.55	1.10	1.5	1.5	2.4	2.4
Design pressure, MPa	4.3/1.7	4.6/1.7	4.3/1.7	4.3/1.7	4.3/1.7	4.3/1.7
Liquid side / Gas side, mm	Ø6.35/Ø9.52	Ø6.35/Ø12.7	Ø9.52/Ø15.9	Ø9.52/Ø15.9	Ø9.52/Ø15.9	Ø9.52/Ø15.9
Liquid side – Gas side, inch	1/4"/3/8"	1/4"/1/2"	3/8"/5/8"	3/8"/5/8"	3/8"/5/8"	3/8"/5/8"
Max. pipe length, m	25	30	50	50	65	75
Max. difference in level, m	10	20	25	25	30	30
Ambient temp. cooling, °C	-15~50	-15~50	-15~50	-15~50	-15~50	-15~50
Ambient temp. heating, °C	-20...+24	-20...+24	-20...+24	-20...+24	-20...+24	-20...+24
AHU kit	KA8140	KA8140	KA8243	KA8140	KA8243	KA8140

Model	MOU-48HFN8	MOU-48HFN8a	MOU-55HFN8	MOU-55HFN8a	MOU-280-HFN6	MOU-335-HFN6
Cooling capacity, kW	14.07 (4.75~14.58)	14.07 (3.52~15.53)	15.53 (5.28~16.71)	15.24 (4.1~17.29)	28 (14.14~36.08)	33.5 (16.92~43.17)
EER	2.74	2.57	2.61	2.58	2.33	2.19
SEER	6.1	6.1	6.1	6.1	6.35	6.42
Energy Efficiency Class	A++	A++	A++	A++	A+	A++
Heating capacity, kW	16.12 (3.93~16.77)	16.12 (4.10~18.17)	18.17 (4.4~19.34)	18.17 (4.4~20.52)	31.5 (15.80~40.89)	37.5 (18.81~48.68)
COP	3.19	2.82	3.01	2.79	3.71	3.3
SCOP	4.0	4.0	4.0	4.0	4.56	4.13
Energy Efficiency Class	A+	A+	A+	A+	A+	A+
Max. input consumption, W	6200	6900	7500	7500	12020	15300
Max. input current, A	11.2	13	14	14	24	33,2
Power supply, Ph, V, Hz	3Ph, 380-415V, 50Hz	3Ph, 380-415V, 50Hz	3Ph, 380-415V, 50Hz	3Ph, 380-415V, 50Hz	3Ph, 380-415V, 50Hz	3Ph, 380-415V, 50Hz
Wiring, # x mm ²	5 x 2,5	5 x 2,5	5 x 2,5	5 x 2,5	5 x 4,0	5 x 6,0
Compressor type	Rotary	Rotary	Rotary	Rotary	Rotary	Rotary
Compressor model	ZKFN-85-8-22	KTQ420D1UMU	ZKFN-85-8-22-2	KTQ420D1UMU		
Compressor capacity, W	13675	13700	13675	13700	17320	22170
Refrigerant oil/oil charge, ml	1400	VG74/1400	1400	VG74/1400	R875EA	FV50S
Outdoor air flow, m ³ /h	7500	7500	7500	7500	11000	11300
Outdoor noise level (sound pressure), dB(A)	66	64	66	64	60	61
Outdoor dimension (WxDxH), mm	952 x 415 x 1333	952 x 415 x 1333	952 x 415 x 1333	952 x 415 x 1333	1120 x 1558 x 528	1120 x 1558 x 528
Outdoor packing (WxDxH), mm	1095 x 495 x 1480	1095 x 495 x 1480	1095 x 495 x 1480	1095 x 495 x 1480	1270 x 1720 x 565	1270 x 1720 x 565
Outdoor Net / Gross weight, kg	106.7/119.9	103.7/118.3	111.3/124.3	107.0/121.2	144.0/160.0	157.0/173.0
Refrigerant type	R32	R32	R32	R32	R410	R410
GWP	675	675	675	675	2088	2088
Refrigerant charged volume, kg	2.8	2.9	2.95	3.0	6.5	8.0
Design pressure, MPa	4.3/1.7	4.3/1.7	4.3/1.7	4.3/1.7	4.3/1.7	4.3/1.7
Liquid side / Gas side, mm	Ø9.52/Ø15.9	Ø9.52/Ø15.9	Ø9.52/Ø15.9	Ø9.52/Ø15.9	Ø9.52/Ø22.2	Ø12.7/Ø25.4
Liquid side – Gas side, inch	3/8"/5/8"	3/8"/5/8"	3/8"/5/8"	3/8"/5/8"	3/8"/7/8"	1/2"/1"
Max. pipe length, m	65	75	65	75	120	120
Max. difference in level, m	30	30	30	30	40	40
Ambient temp. cooling, °C	-15~-50	-15~-50	-15~-50	-15~-50	-5~-48	-5~-48
Ambient temp. heating, °C	-20...+24	-20...+24	-20...+24	-20...+24	-20...+24	-20...+24
AHU kit	KA8243	KA8140	KA8243	KA8140	AHUKZ-02D	AHUKZ-02D

8.AHU KIT SPECIFICATIONS

8.1. Introduction

Control module enables to control inverter type outdoor unit without the needs of air conditioner factory produced indoor unit. It gives possibility to control outdoor unit capacity and state to produce heater cooling for AHU or water heater/cooler.

Control module enables to control inverter condensing unit capacity 0-10%~100% by external input 0~10VDC signal.



Dry contact signal is used to control outdoor unit to work in cooling or heating mode.

The installation and operation of outdoor unit as well controller must be done according to the manuals (i.e. User's manual, Installation manual, Technical Specification, Service Manual).

8.2. Specification and packing list


Model		KA8140/KA8141	KA8243/KA8245	AHUKZ-02D
Casing		Plastic	Plastic	Metal
Dimension (h × w × d)		61 × 100 × 191 mm	45 × 100 × 191 mm	125x345x393 mm
Weight		0.4 Kg	0.35 Kg	5.9 kg
Operation Temperature Range		-25 °C ~ +45 °C	-25°C ~ +45 °C	-25°C ~ +52°C
Operation Humidity Range		40 - 90 %	40-90 %	40-90 %
Power Supply		230 VAC, 1 Phase, 50/60Hz	230 VAC, 1 Phase, 50/60 Hz	230 VAC, 1 Phase, 50/60 Hz
Voltage Range		208 - 240V	208-240 V	208-240 V
Fuse		15 A, 250 V	15 A, 250 V	15 A, 250 V
Resistance class		IP54	IP54	IP 20
Packing list	Box body	1 piece	1 piece	1 piece
	Box cover	1 piece	1 piece	1 piece
	Anti-water seal between box body and box cover	1 piece	1 piece	1 piece
	Temp sensor	1 piece	1 piece (for KA8245 only)	5 pieces
	Gland	3 pieces	3 pieces	4 pieces
	Manual	1 piece	1 piece	1 piece
	EXV valve with pipes	-	-	1 piece
	Control panel	-	-	1 piece
	Cable extension for temperature sensor	-	-	5 pieces
	Cable extension for EXV valve	-	-	1 piece

8.3. System design

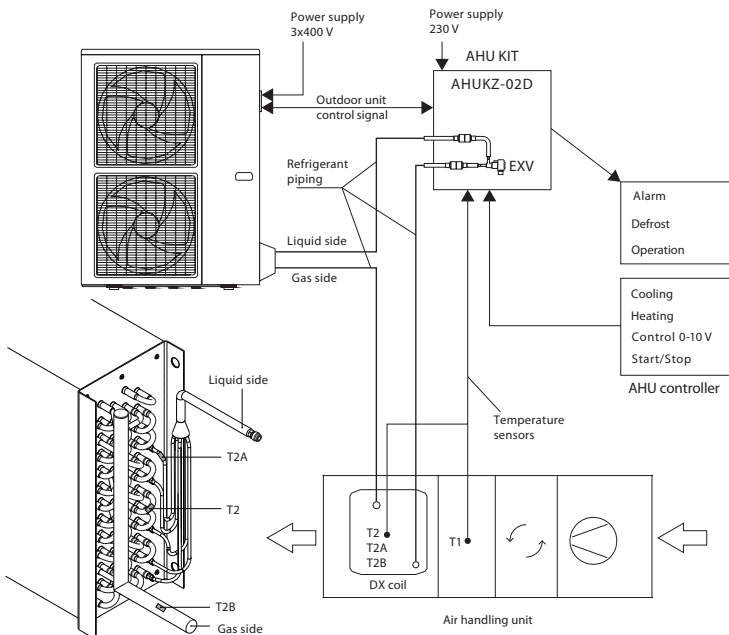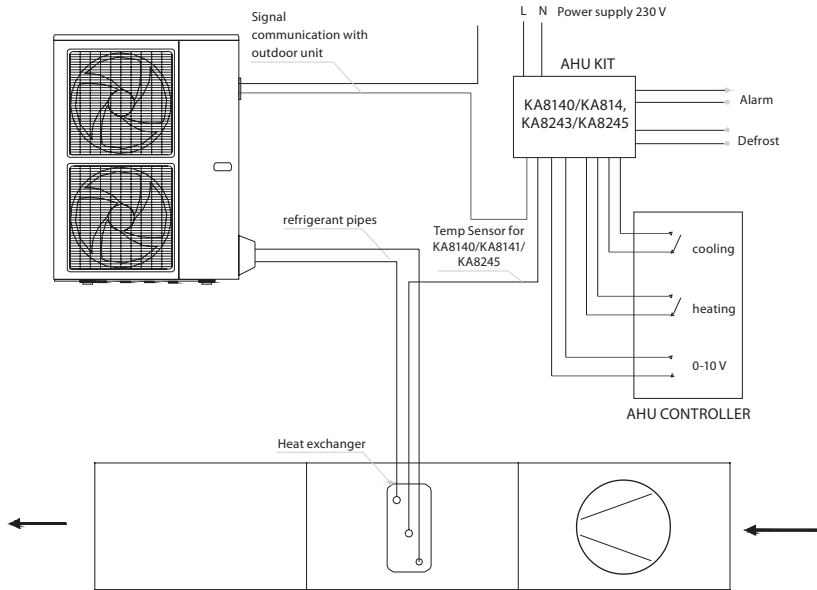


8.4. Function and Setting

8.4.1. KA8140/KA8141

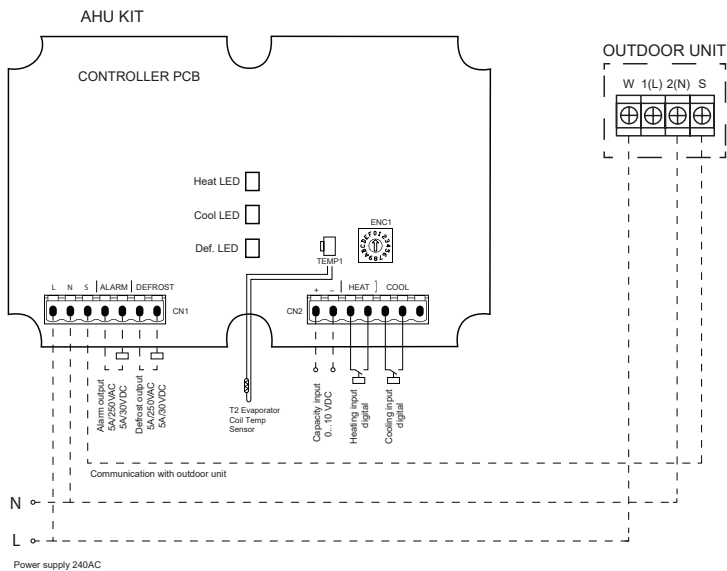


8.4.2. KA8243/KA8245

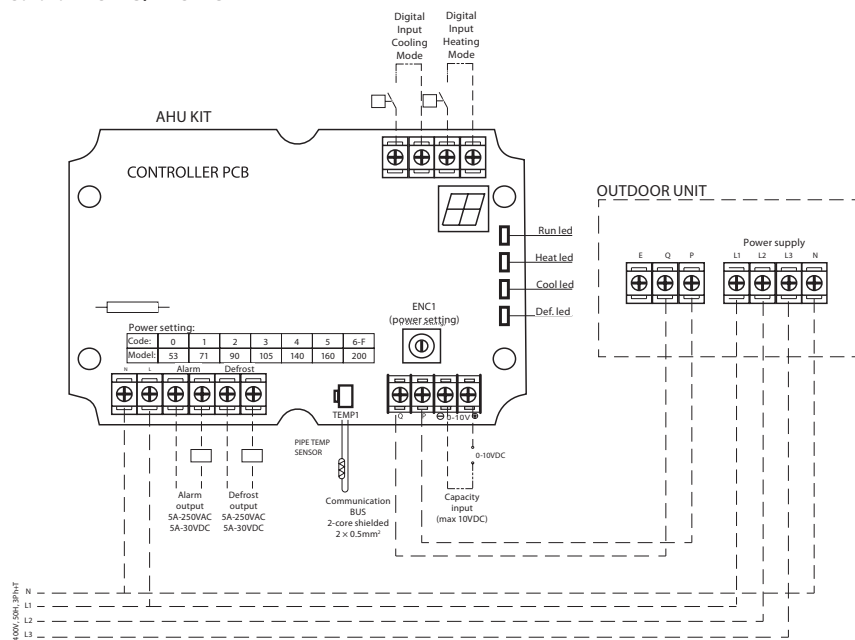

Connection Terminal Introduction:

- N, L – Power supply connection terminal 230V,1-phase, 50/60Hz.
 ALARM – Digital output 5A-250VAC or 5A-30VDC. When outdoor unit has malfunction signal is activated.
 DEFROST – Digital output 5A-250VAC or 5A-30VDC. When outdoor unit is in defrost mode is activated.
 PQ – Terminal to communication cable between controller and outdoor unit. Should not be less than 2×0,5mm² (shielded) (KA8243/KA8245).
 S – Communication between controller and outdoor unit (KA8140/KA8141).
 Different outdoor units may have different signal terminal. Please refer to following connection:

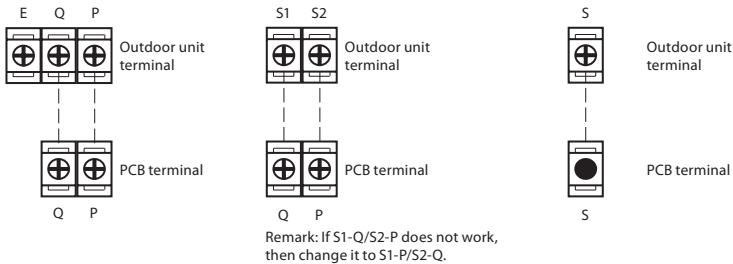

TEMP1 – Anti-frozen protection sensor terminal (for KA8140/KA8141, KA8245). Please know that temp sensor must be placed at middle of heat changer.

0-10V – Analog input terminal to control outdoor unit capacity.

Capacity steps:

- 0-0.5 V 0% (unit stopped)
- 0.5-1.5 V, 10 % capacity (LED display digit 1)
- 1.5-2.5 V, 20 % capacity (LED display digit 2)
- 2.5-3.5 V, 30 % capacity (LED display digit 3)
- 3.5-4.5 V, 40 % capacity (LED display digit 4)
- 4.5-5.5 V, 50 % capacity (LED display digit 5)
- 5.5-6.5 V, 60 % capacity (LED display digit 6)
- 6.5-7.5 V, 70 % capacity (LED display digit 7)
- 7.5-8.5 V, 80 % capacity (LED display digit 8)
- 8.5-9.5 V, 90 % capacity (LED display digit 9)
- 9.5-10.5V, 100% capacity (LED display digit 10)



Negative(0/-) and Positive(10/+) terminals can not be mixed, otherwise it may destroy this control module. Signal input can not exceed 10.5VDC, otherwise it may destroy this control module.

COOL – Digital input. When terminals are closed, the unit will run in cooling mode and “COOL” LED will be on.

HEAT – Digital input. When terminals are closed, the unit will run in heating mode and “HEAT” LED will be on.

NOTE: HEAT signal has the priority. If both COOL and HEAT terminals are closed, unit will run in HEAT mode.

ENC1 (KA8140/KA8141) – knob for multi split connection to select indoor unit capacity.

This knob is for multi indoor units connection only.

This knob will not work at one indoor to one outdoor connection.

Knob selection	Indoor unit capacity	Knob selection	Indoor unit capacity
0	2,0 kW unit	6	7,1 kW unit
1	2,6 kW unit	7	9,0 kW unit
2	3,2kW unit	8	10,5 kW unit
3	3,5 kW unit	9	14,0 kW unit
4	5,3 kW unit	A - F	16,0 kW unit
5	7,1 kW unit		

ENC1 (KA8243/KA8245) – knob to select condensing unit model.

Knob selection	Condensing unit	Knob selection	Condensing unit
0	5,3 kW unit	3	10,5 kW unit
1	7,1 kW unit	4	14,0 kW unit
2	9,0 kW unit	5	16,0 kW unit

LED lamps introduction:


RUN LED is lightened when controller is powered on.

HEAT LED is lightened when the unit is operating in heating mode.

COOL LED is lightened when the unit is operating in cooling mode.

DEF LED is lightened when the unit is in defrost mode.


8.4.3. AHUKZ-02D

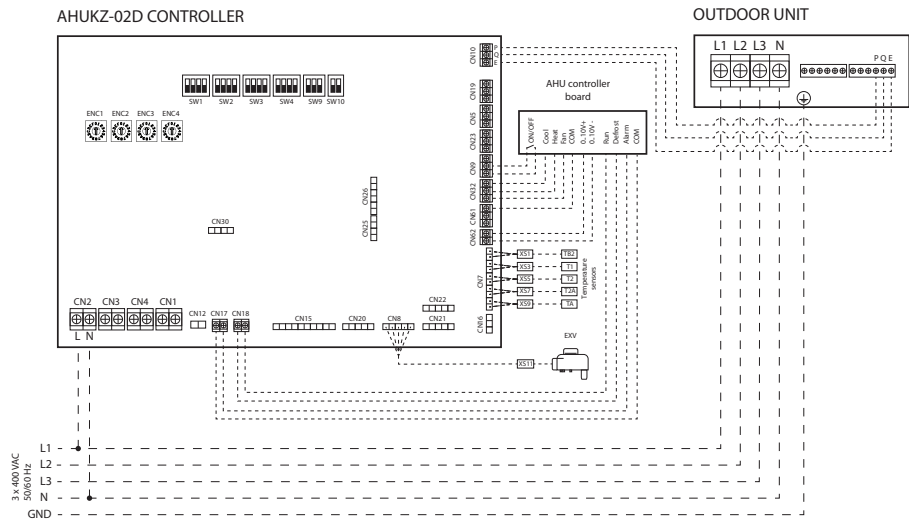

ENC1 settings

0	28 kW	MOU-280-HFN6
1	33,5 kW	MOU-335-HFN6

SW4 settings

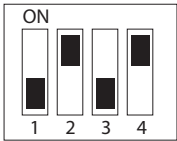


SW4

0..10 V capacity regulation


- 0-0.5 V 0% (outdoor unit stopped)
- 0.5-1.5 V, 10 % power
- 1.5-2.5 V, 20 % power
- 2.5-3.5 V, 30 % power
- 3.5-4.5 V, 40 % power
- 4.5-5.5 V, 50 % power
- 5.5-6.5 V, 60 % power
- 6.5-7.5 V, 70 % power
- 7.5-8.5 V, 80 % power
- 8.5-9.5 V, 90 % power
- 9.5-10.5V, 100% power

8.5. Control module connection to controller


8.5.1. KA8140/KA8141 connection to C6

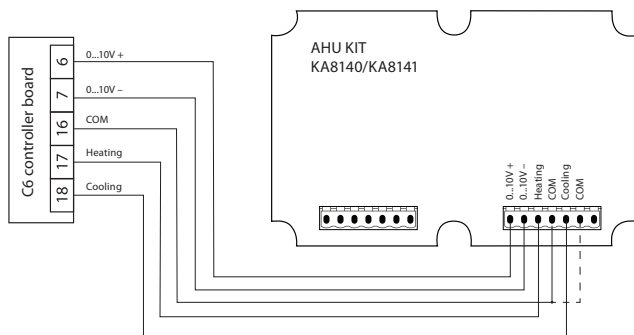


8.5.2. KA8140/KA8141 connection to C6M

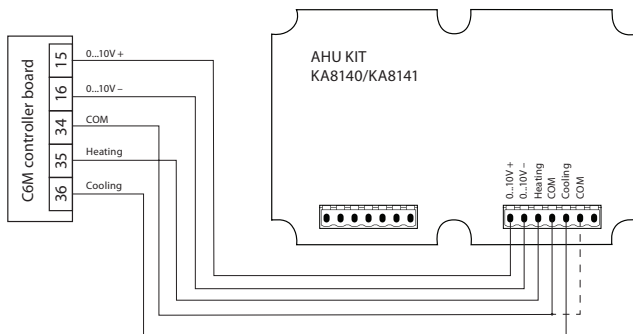


8.5.3. KA8140/KA8141 connection to C5

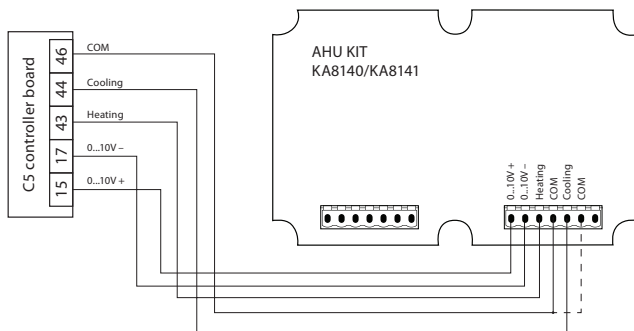


8.5.4. KA8140/KA8141 connection to C5 zone

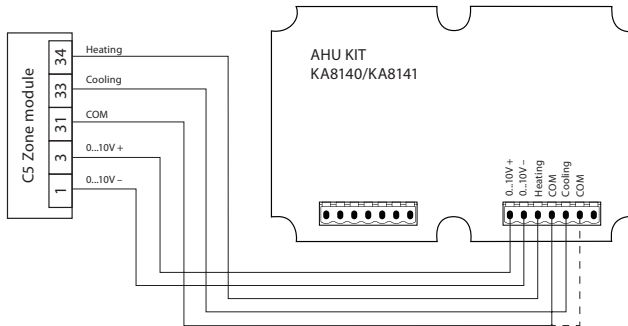


8.5.5. KA8243/KA8245 connection to C5

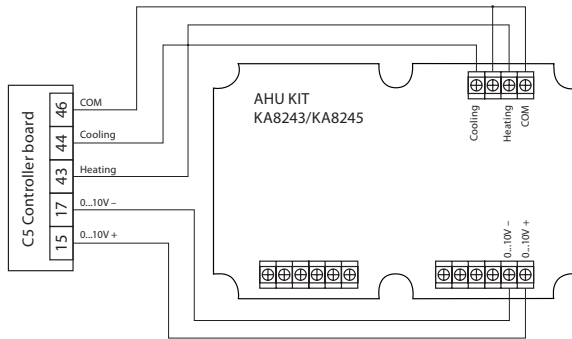


8.5.6. KA8243/KA8245 connection to C5 zone

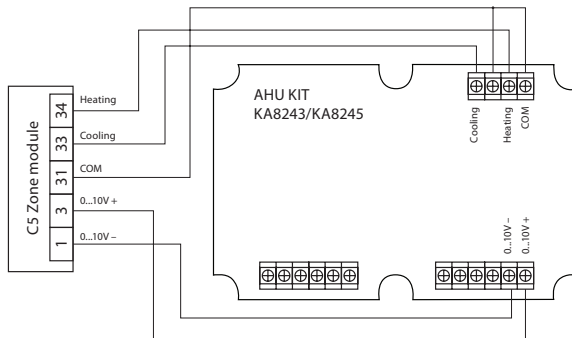

8.5.7. AHUKZ-02D connection to C5 controller

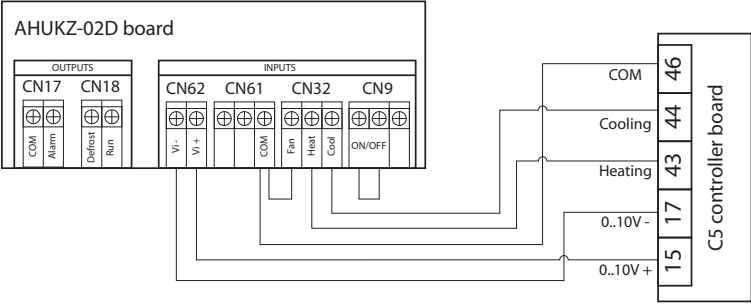

8.5.8. AHUKZ-02D connection to C5 additional zone

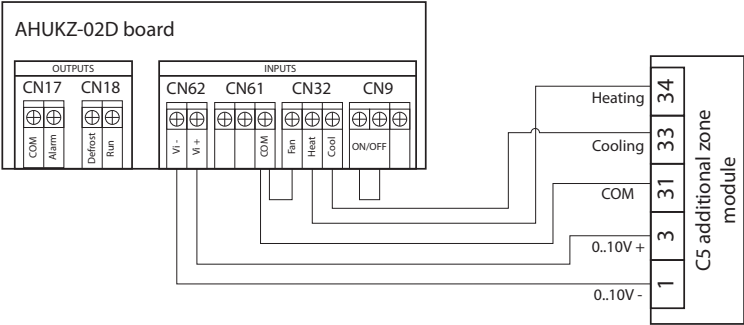


8.6. Malfunction, Error Code and Solving steps


Display Code	Malfunction or Protection	Solving steps
E1	communication error with outdoor unit.	Please refer to 8.6.1
E2	temp sensor malfunction	Please refer to 8.6.2
Ed	outdoor unit temperature sensor malfunction or outdoor unit protection	Please refer to 8.6.3
dF	outdoor is defrosting	It's normal or refer to outdoor unit service manual
E5	evaporator coil temperature sensor T2 malfunction	
F0	current overload protection	
F1	outdoor unit ambient temperature sensor T4 malfunction	
F2	outdoor unit condenser pipe temperature sensor T3 malfunction	
F3	outdoor unit compressor discharge temperature sensor TP malfunction	
F4	outdoor unit EEPROM parameter error	
F5	outdoor unit fan speed is operating outside of the normal range	
F6	outdoor unit T2b temperature sensor malfunction	
P0	IPM malfunction or IGBT over-strong current protection	
P1	over voltage or over low voltage protection	
P2	top temperature protection of compressor	
P3	outdoor low temperature protection	
P4	compressor protection or malfunction	
--	multi split indoor units cooling/heating mode conflict	
P6	low pressure protection of compressor	

For troubleshooting with no solving solution, please refer to outdoor unit producer.


8.6.1. E1 solving step – communication error with outdoor unit

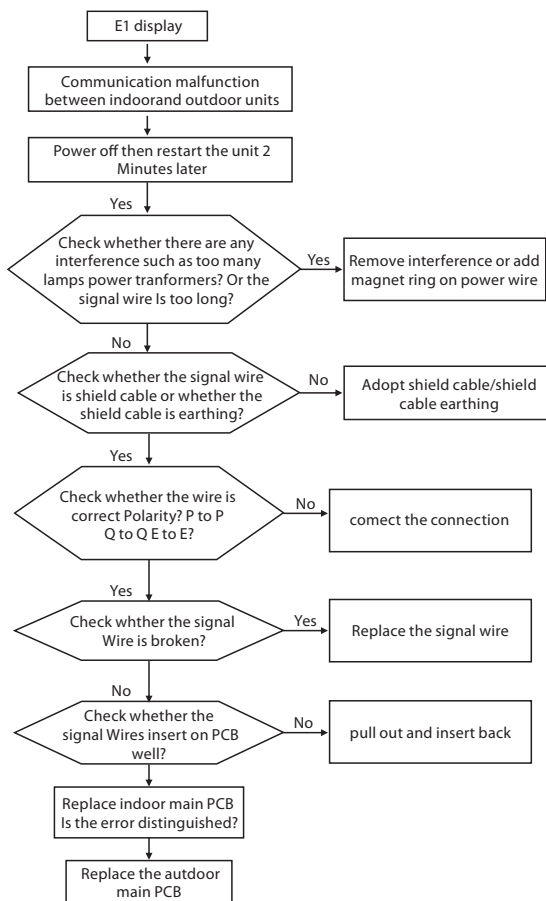

8.6.2. E2 – temp sensor malfunction

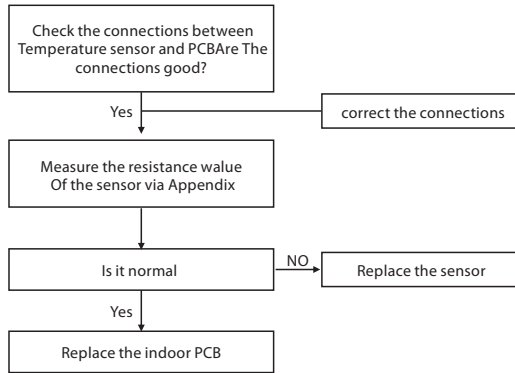


8.6.3. Ed – outdoor unit malfunction

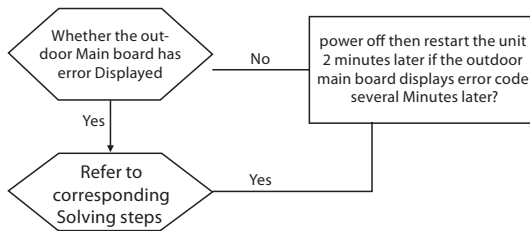


8.7. Dimensions

8.7.1. KA8140/KA8141

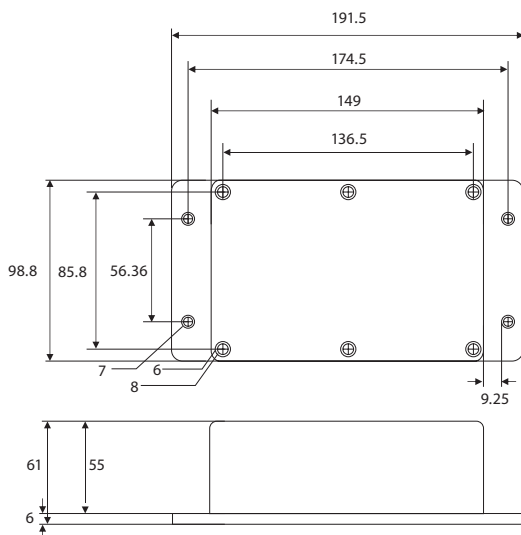

8.7.2. KA8243/KA8245

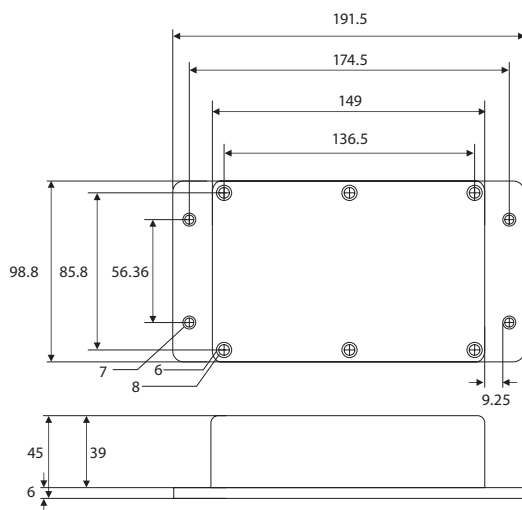

Appendix 1. Temperature Sensor Resistance Value Table (°C-R)

°C	R, Ом	°C	R, Ом	°C	R, Ом	°C	R, Ом
-20	115.266	20	12.6431	60	2.35774	100	0.62973
-19	108.146	21	12.0561	61	2.27249	101	0.61148
-18	101.517	22	11.5000	62	2.19073	102	0.59386
-17	96.3423	23	10.9731	63	2.11241	103	0.57683
-16	89.5865	24	10.4736	64	2.03732	104	0.56038
-15	84.2190	25	10.000	65	1.96532	105	0.54448
-14	79.3110	26	9.55074	66	1.89627	106	0.52912
-13	74.5360	27	9.12445	67	1.83003	107	0.51426
-12	70.1698	28	8.71983	68	1.76647	108	0.49989
-11	66.0898	29	8.33566	69	1.70547	109	0.48600
-10	62.2756	30	7.97078	70	1.64691	110	0.47256
-9	58.7079	31	7.62411	71	1.59068	111	0.45957
-8	56.3694	32	7.29464	72	1.53668	112	0.44699
-7	52.2438	33	6.98142	73	1.48481	113	0.43482
-6	49.3161	34	6.68355	74	1.43498	114	0.42304
-5	46.5725	35	6.40021	75	1.38703	115	0.41164
-4	44.0000	36	6.13059	76	1.34105	116	0.40060
-3	41.5878	37	5.87359	77	1.29078	117	0.38991
-2	39.8239	38	5.62961	78	1.25423	118	0.37956
-1	37.1988	39	5.39689	79	1.21330	119	0.36954
0	35.2024	40	5.17519	80	1.17393	120	0.35982
1	33.3269	41	4.96392	81	1.13604	121	0.35042
2	31.5635	42	4.76253	82	1.09958	122	0.3413
3	29.9058	43	4.57050	83	1.06448	123	0.33246
4	28.3459	44	4.38736	84	1.03069	124	0.32390
5	26.8778	45	4.21263	85	0.99815	125	0.31559
6	25.4954	46	4.04589	86	0.96681	126	0.30754
7	24.1932	47	3.88673	87	0.93662	127	0.29974
8	22.5662	48	3.73476	88	0.90753	128	0.29216
9	21.8094	49	3.58962	89	0.87950	129	0.28482
10	20.7184	50	3.45097	90	0.85248	130	0.27770
11	19.6891	51	3.31847	91	0.82643	131	0.27078
12	18.7177	52	3.19183	92	0.80132	132	0.26408
13	17.8005	53	3.07075	93	0.77709	133	0.25757
14	16.9341	54	2.95896	94	0.75373	134	0.25125
15	16.1156	55	2.84421	95	0.73119	135	0.24512
16	15.3418	56	2.73823	96	0.70944	136	0.23916
17	14.6181	57	2.63682	97	0.68844	137	0.23338
18	13.9180	58	2.53973	98	0.66818	138	0.22776
19	13.2631	59	2.44677	99	0.64862	139	0.22231

UAB KOMFOVENT

SERVICE AND SUPPORT

Tel. +370 5 200 8000
service@komfovent.com
www.komfovent.com

SWEDEN

Komfovent AB

Ögärdesvägen 12B
433 30 Partille, Sverige
Phone: +46 31 487 752
info_se@komfovent.com
www.komfovent.se

FINLAND

Komfovent Oy

Muuntotie 1 C1
FI-01 510 Vantaa, Finland
Phone: +358 20 730 6190
toimisto@komfovent.com
www.komfovent.com

GERMANY

Komfovent GmbH

Konrad-Zuse-Str. 2a,
42551 Velbert, Deutschland
Phone: +49 0 2051 6051180
info@komfovent.de
www.komfovent.de

LATVIA

SIA Komfovent

Bukaišu iela 1, LV-1004 Riga, Latvia
Phone: +371 24 66 4433
info.lv@komfovent.com
www.komfovent.com

Vidzemes filiāle

Alejas iela 12A, LV-4219
Valmiermuiža, Valmieras pagasts,
Burtnieku novads
Phone: +371 29 358 145
kristaps.zaicevs@komfovent.com
www.komfovent.com